

CONVEYOR AND PROCESS BELTS

NA-887

TECHNICAL DATA SHEET

TYPE 2M12 U0-U10 W A

COMPOSITION Material Polyurethane (TPU)

CODE

Material	rolyuletilalie (170)					
Thickness	1.00	mm	0.039	in.		
Surface pattern	Smooth					

Colour White Coefficient of friction

Material Polyester (PET)
Plies no. 2

Weft type Rigid

Material
Thickness
Surface
pattern

Colour

--- mm --- in.
LdB fabric
White

Fabric with polyurethane (TPU) impregnation

TECHNICAL SPECIFICATIONS

Total thickness		2.40 mm	0.09	in.
Weight		2.70 kg/m ²	0.55	lbs./sq.ft
Elongation at 1%		12 N/mm	69.0	lbs./in.
Max. admissible pull		24 N/mm	137.0	lbs./in.
Temperature resistance (1)	min.	-20 °C	-4	°F
	max.	100 °C	212	°F
(1) Use of the helt with limit v	alues may re	duce its life		

Use of the belt with limit values may reduce its life.

Minimum radius / diameter $^{(2)}$

Knife edge minimum radius no

■ Bending roller min. diameter 50 mm 1.97 in.

Counter-bending roller min. diameter 60 mm 2.36 in.

 $^{(2)}$ The above mentioned values depend on the type of CHIORINO joint recommends

Coefficient of friction on driving surface

Raw steel sheet 0.20 [-]
Laminated plastic/wood 0.25 [-]
Steel roller 0.20 [-]
Rubberized roller 0.30 [-]

Max. production width 2000 mm 79 in.

SUITABLE FOR

Food: meat and fish processing Steel blankets magnetic elevators



FEATURES

Humidity influence	no
Suitable to metal detector	yes
Permanent antistatic dynamically (UNI EN ISO 21179)	yes
Static conductivity (UNI EN ISO 284)	no
Conveying on skid bed	yes
Conveying on rollers	yes
Conveying on skid bed on top and return	no
Troughed conveying	no
Swan neck conveying	yes
Inclined conveying	no
Accumulators belts	yes
Curved conveyor	no
Chemical resistances <u>link</u>	5

COMPLIANCES

REACH EC 1907/2006 Regulation and Amendments EC 1935/2004 Regulation and Amendments EC 2023/2006 Regulation and Amendments EU 10/2011, 2017/752 Regulation and Amendments HACCP (Hazard Analysis and Critical Control Points) FDA (Food and Drug Administration)



NOTES

Issue: 24-07-2009 Last Update: 12-12-2018

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.




CONVEYOR AND PROCESS BELTS

JOINING TECHNICAL DATA SHEET

CODE NA-887 TYPE **2M12 U0-U10 W A**

Recommended joining procedure SINGLE Z

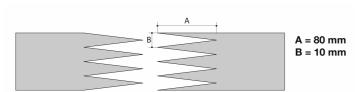

Other joining methods can be used:


Check our general catalogue to get further info on CHIORINO joining methods.

Pressing

Heating press P\PL\PLS


Press settings			
Upper platen temperature	150 °C		
Lower platen temperature	100 °C		
Temperature gauge setting	145 °C		
Curing time in press	3 min.		
Pressure	3 bar		
Film	TC-32 - White PU film		
Cement			

Use the KM330 thermometer to check the effective temperature inside the belt. Place the thermometer gauge as shown by the drawing at side.

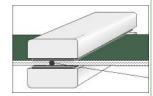

- 2. Allow the cooling cycle to be completed before removing the belt from the press.
- A reliable strength of the joint is ensured, providing that temperatures reached by the press are those indicated in the table at side.
 A periodical inspection of the thermostats is recommended, to make sure they function correctly.

Layout of components

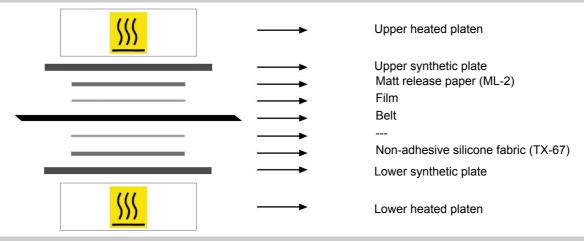

Notes

Issued: 08-11-2005 Last Update: 30-01-2014

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.